


Viltrox Lens Upgrade Steps

MAC Version

1. The lens connects to the Mac via a USB cable.
2. Find the USB flash drive called ViltroxDFU




3. Open DeviceInformation.txt in the USB flash drive to check the version number.

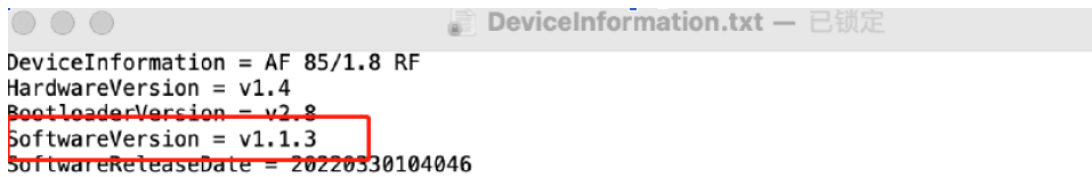


4. After confirming that you want to upgrade, right-click on the upgrade firmware file -> copy



5 . Double-click to open the U disk of ViltroxDFU, then paste the project and wait for the upgrade to complete

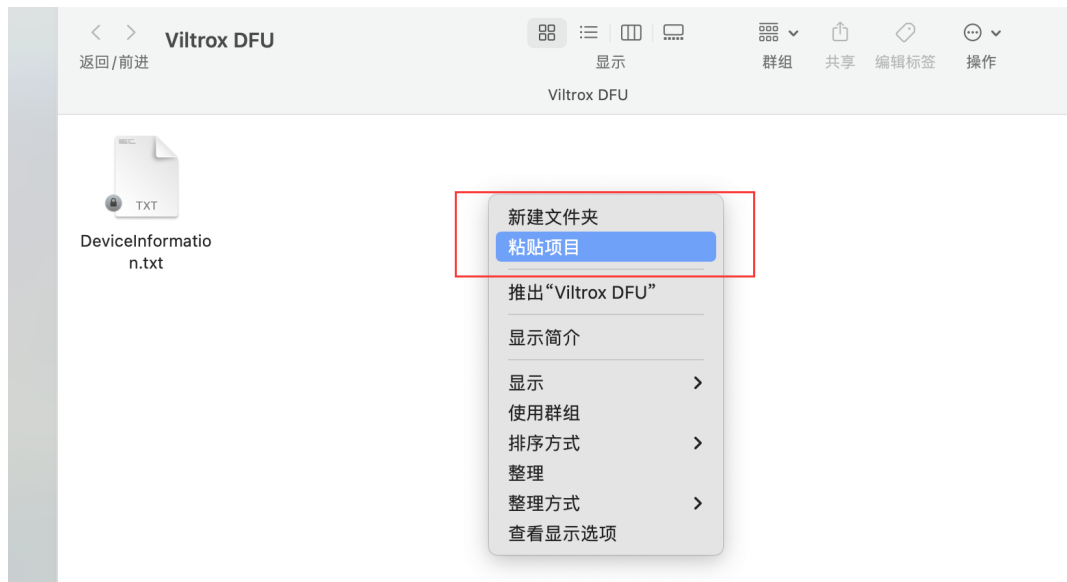

6 . After pasting the progress bar, the USB flash drive of Viltrox DFU will automatically exit and start the upgrade. The upgrade process will last for about 5 seconds. After the upgrade is complete, the USB flash drive will reappear. At this time, open ViltroxDFU-> DeviceInformation.txt to confirm the new version number .

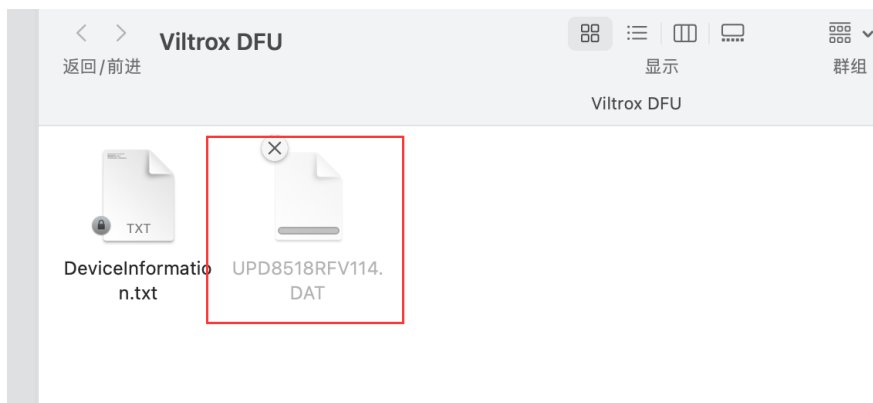

At this point, the firmware upgrade of the upgraded version V1.1.3-V1.1.4 has been completed